Roland Keyboard Stand KS-J8 Owner's Manual

Before using this stand, carefully read the sections entitled: "USING THE UNIT SAFELY" and "IMPORTANT NOTES." Additionally, the manual should be saved and kept on hand as a convenient reference.

* 5 1 0 0 0 2 0 6 2 4 - 0 1 *

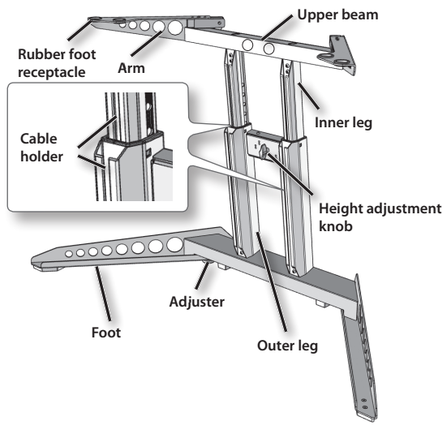

* Be careful not to pinch your fingers when setting up or folding up the stand.
* Do not adjust the height of the stand while a keyboard is mounted on it.
* Avoid inserting fingers into any of the holes in the stand. Otherwise, you risk injury.
* Before using the stand, make sure that the inner legs are locked. If the inner legs are not locked, you risk injury as the result of the keyboard falling from the stand.
* Use the cable holder to manage the cables that are connected to the keyboard.
* Do not move the stand with the keyboard resting on it. Doing so may cause the keyboard to overturn or fall.

Assembling the Stand

*** When assembling the KS-J8, cover your work surface with a soft blanket or the cushioning materials in which the parts were packed. You risk scratching the parts or the floor if you place the parts directly on the floor.**

1 Setting up the feet and arms

1. Place the stand as illustrated below.

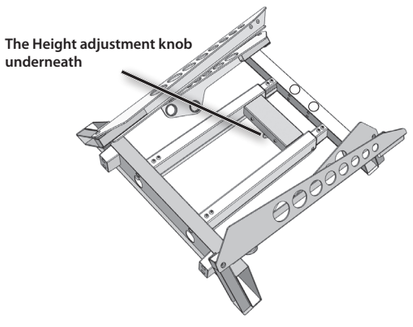

2. One at a time, pull out the feet.

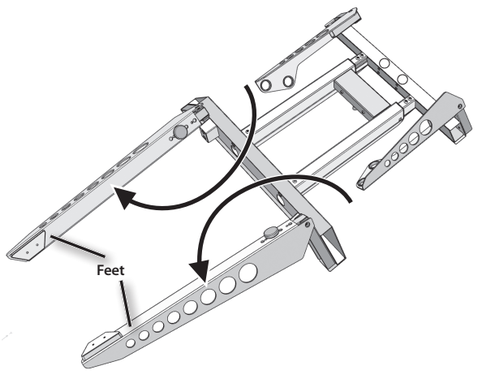

3. Turn the stand over.

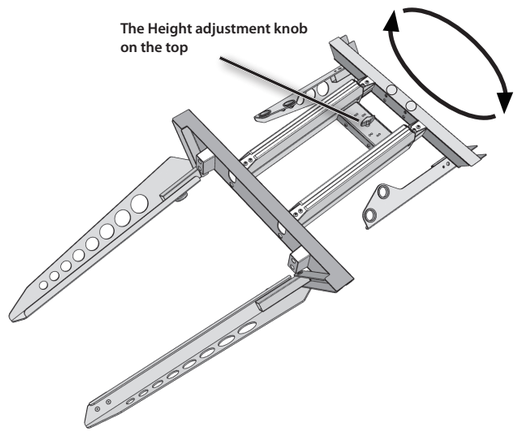

4. Spread the feet all the way.

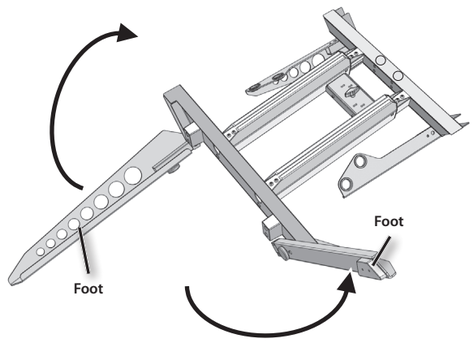

5. Place the stand upright.

6. One at a time, spread the arms all the way.

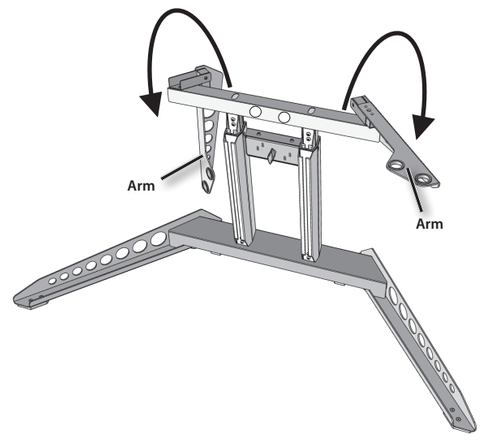

2 Adjusting the height of the stand

1. While firmly holding the upper beam with one hand, turn the height adjustment knob clockwise.

The locking mechanism for the inner leg will be released, and the upper beam will move.

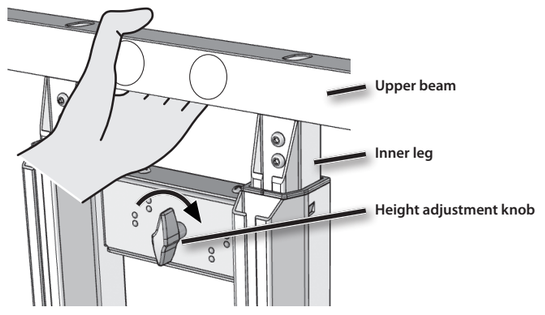

2. While continuing to turn the height adjustment knob, lift the upper beam until it's at the desired height.

Adjust it so that the centers of the holes on the inner legs are aligned with the edges of the outer legs.

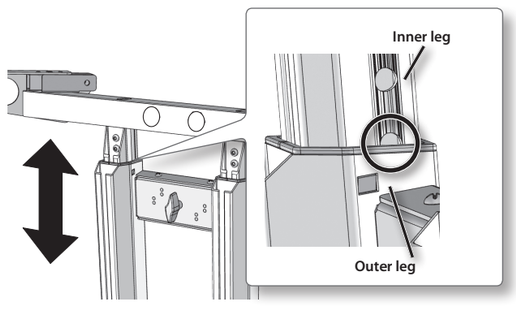

3. Take your hand away from the height adjustment knob.

You should hear a clicking sound when the inner legs are properly locked.

*** Try moving the upper beam up or down slightly, and confirm that the inner legs are locked.**

MEMO

If the stand seems loose, turn the adjuster to adjust the height.

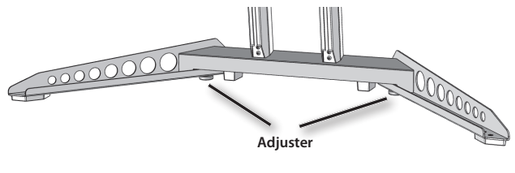

Setting Up the Keyboard

1. Firmly insert the rubber feet on the bottom of the keyboard (at its front, beneath the keys) into the rubber feet receptacles on the arms (either A or B).

The keyboard has been set up properly once its rubber feet have been inserted into the rubber feet receptacles of the arms.

* Check to make certain that both of the rubber feet are properly inserted into the rubber feet receptacles. If the rubber feet are not properly inserted into the rubber feet receptacles, the keyboard could tilt, or fall down.

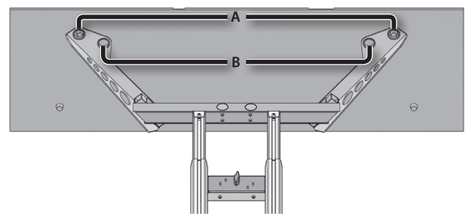

Folding Up the Stand

1. Disconnect all cables that are connected to the keyboard.

2. Remove the keyboard from the stand.

3. Remove the cables from the cable holder.

4. Using the procedure described in "Adjusting the height of the stand," adjust the stand so it's at its lowest position.

*** Try moving the upper beam up or down slightly, to check if the inner legs are locked.**

5. Fold up the stand by performing the reverse of the steps described in "Setting up the feet and arms."

USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About ⚠WARNING and ⚠CAUTION Notices

⚠WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
⚠CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols

⚠	The △symbol alerts the user to important instructions or warnings.The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
⃠	The ⃠symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
●	The ●symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING

⚠WARNING

Do not open or perform any internal modifications on the stand. (The only exception would be where this manual provides specific instructions which should be followed in order to put in place user–installable options.)

Do not attempt to repair the stand, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page.

Never install the stand in any of the following locations.

- Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are
- Damp (e.g., baths, washrooms, on wet floors); or are
- Exposed to steam or smoke; or are
- Subject to salt exposure; or are
- Humid; or are
- Exposed to rain; or are
- Dusty or sandy; or are
- Subject to high levels of vibration and shakiness.

Make sure you always have the stand placed so it is level and sure to remain stable. Never place it on stands that could wobble, or on inclined surfaces.

⚠WARNING

In households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the stand.

Protect the stand from strong impact.
(Do not drop it!)

⚠CAUTION

This stand for use only with specific Roland musical instruments. Use with other models is capable of resulting in instability causing possible injury. See apparatus instructions.

Even if you observe the cautions given in the owner's manual, certain types of handling may allow the keyboard to fall from the stand, or cause the stand to overturn. Please be mindful of any safety issues before using the keyboard.

Never climb on top of the stand.

IMPORTANT NOTES

Placement

- Depending on the material and temperature of the surface on which you place the stand, its rubber feet may discolor or mar the surface. You can place a piece of felt or cloth under the rubber feet to prevent this from happening. If you do so, please make sure that the stand will not slip or move accidentally.

Maintenance

- For everyday cleaning wipe the stand with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the stand thoroughly with a soft, dry cloth.
- Never use benzine, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

Additional Precautions

- In the interest of product improvement, the specifications and/or appearance of this stand are subject to change without prior notice.

Copyright ©2011 ROLAND CORPORATION
All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.
Roland is a registered trademark of Roland Corporation in the United States and/or other countries.

Information

When you need repair service, call your nearest Roland Service Center or authorized Roland distributor in your country as shown below.

AFRICA

EGYPT
Al Fanny Trading Office
9, EBN Hagar Al Askalany Street, ARD E1 Golf, Heliopolis, Cairo 11341, EGYPT
TEL: (022)-417-1828

REUNION
MARCEL FO-YAM Sarl
25 Rue Jules Hermann, Chaudron - BP79 97 491 Ste Clotilde Cedex, REUNION ISLAND
TEL: (0262) 218-429

SOUTH AFRICA
T.O.M.S. Sound & Music (Pty)Ltd.
2 ASTRON ROAD DENVER JOHANNESBURG ZA 2195, SOUTH AFRICA
TEL: (011) 417 3400

Paul Bothner(PTY)Ltd.
Royal Cape Park, Unit 24 Londonderry Road, Ottery 7800 Cape Town, SOUTH AFRICA
TEL: (021) 799 4900

ASIA

CHINA
Roland Shanghai Electronics Co.,Ltd.
5F. No.1500 Pingliang Road Shanghai 200090, CHINA
TEL: (021) 5580-0800

Roland Shanghai Electronics Co.,Ltd. (BEIJING OFFICE)
3F, Soluxe Fortune Building 63 West Dawang Road, Chaoyang District, Beijing, CHINA
TEL: (010) 5960-2565

HONG KONG
Tom Lee Music
11/F Silvercord Tower 1 30 Canton Rd Tsimshatsui, Kowloon, HONG KONG
TEL: 852-2737-7688

Parsons Music Ltd.
8th Floor, Railway Plaza, 39 Chatham Road South, T.S.T, Kowloon, HONG KONG
TEL: 852-2333-1863

INDIA
Rivera Digitec (India) Pvt. Ltd.
411, Nirman Kendra Mahalaxmi Flats Compound Off. Dr. Edwin Moses Road, Mumbai-400011, INDIA
TEL: (022) 2493 9051

INDONESIA
PT. Citra Intirama
Ruko Garden Shopping Arcade Unit 8 CR, Podomoro City Jl.Letjend. S.Parman Kav.28 Jakarta Barat 11470, INDONESIA
TEL: (021) 5698-5519/5520

KOREA
Cosmos Corporation
1461-9, Seocho-Dong, Seocho Ku, Seoul, KOREA
TEL: (02) 3486-8855

MALAYSIA/ SINGAPORE
Roland Asia Pacific Sdn. Bhd.
45-1, Block C2, Jalan PJU 1/39, Dataran Prima, 47301 Petaling Jaya, Selangor, MALAYSIA
TEL: (03) 7805-3263

PHILIPPINES
G.A. Yupangco & Co. Inc.
339 Gil J. Puyat Avenue Makati, Metro Manila 1200, PHILIPPINES
TEL: (02) 899 9801

TAIWAN
ROLAND TAIWAN ENTERPRISE CO., LTD.
9F-5, No. 112 Chung Shan North Road Sec. 2 Taipei 104, TAIWAN R.O.C.
TEL: (02) 2561 3339

THAILAND
Theera Music Co. , Ltd.
100-108 Soi Verng Nakornkasem, New Road,Sumpantawong, Bangkok 10100, THAILAND
TEL: (02) 224-8821

VIET NAM
VIET THUONG CORPORATION
386 CACH MANG THANG TAM ST. DIST.3, HO CHI MINH CITY, VIET NAM
TEL: (08) 9316540

OCEANIA

AUSTRALIA/ NEW ZEALAND
Roland Corporation Australia Pty.,Ltd.
38 Campbell Avenue Dee Why West. NSW 2099, AUSTRALIA

For Australia
TEL: (02) 9982 8266
For New Zealand
TEL: (09) 3098 715

CENTRAL/LATIN AMERICA

ARGENTINA
Instrumentos Musicales S.A.
Av.Santa Fe 2055
(1123) Buenos Aires, ARGENTINA
TEL: (011) 4508-2700

BARBADOS
A&B Music Supplies LTD
12 Webster Industrial Park Wildey, St.Michael, BARBADOS
TEL: (246) 430-1100

BRAZIL
Roland Brasil Ltda.
Rua San Jose, 211
Parque Industrial San Jose
Cotia - Sao Paulo - SP, BRAZIL
TEL: (011) 4615 5666

CHILE
Comercial Fancy II S.A.
Rut.: 96.919.420-1
Nataniel Cox #739, 4th Floor
Santiago - Centro, CHILE
TEL: (02) 688-9540

COLOMBIA
Centro Musical Ltda.
Cra 43 B No 25 A 41 Bododega 9
Medellin, COLOMBIA
TEL: (574) 3812529

COSTA RICA
JUAN Bansbach Instrumentos Musicales
Ave.1. Calle 11, Apartado 10237,
San Jose, COSTA RICA
TEL: 258-0211

CURACAO
Zeelandia Music Center Inc.
Orionweg 30
Curacao, Netherland Antilles
TEL: (305) 5926866

DOMINICAN REPUBLIC
Instrumentos Fernando Giraldez
Calle Proyecto Central No.3
Ens.La Esperilla
Santo Domingo,
DOMINICAN REPUBLIC
TEL: (809) 683 0305

ECUADOR
Mas Musika
Rumichaca 822 y Zaruma
Guayaquil - ECUADOR
TEL: (593-4) 2302364

EL SALVADOR
OMNI MUSIC
75 Avenida Norte y Final Alameda Juan Pablo II,
Edificio No.4010 San Salvador,
EL SALVADOR
TEL: 262-0788

GUATEMALA
Casa Instrumental
Calzada Roosevelt 34-01,zona 11
Ciudad de Guatemala,
GUATEMALA
TEL: (502) 599-2888

HONDURAS
Almacen Pajaro Azul S.A. de C.V.
BO.Paz Barahona
3 Ave.11 Calle S.O
San Pedro Sula, HONDURAS
TEL: (504) 553-2029

MARTINIQUE
Musique & Son
Z.I.Les Mangle
97232 Le Lamentin,
MARTINIQUE F.W.I.
TEL: 596 596 426860

Gigamusic SARL
10 Rte De La Folie
97200 Fort De France
MARTINIQUE F.W.I.
TEL: 596 596 715222

MEXICO
Casa Veerkamp, s.a. de c.v.
Av. Toluca No. 323, Col. Olivar de los Padres 01780 Mexico D.F., MEXICO
TEL: (55) 5668-6699

NICARAGUA
Bansbach Instrumentos Musicales Nicaragua
Altamira D'Este Calle Principal de la Farmacia 5ta.Avenida
1 Cuadra al Lago.#503
Managua, NICARAGUA
TEL: (505) 277-2557

PANAMA
SUPRO MUNDIAL, S.A.
Boulevard Andrews, Albrook,
Panama City, REP. DE PANAMA
TEL: 315-0101

PARAGUAY
Distribuidora De Instrumentos Musicales
J.E. Olear y ESQ. Manduvira
Asuncion, PARAGUAY
TEL: (595) 21 492147

PERU
Audionet
Distribuciones Musicales SAC
Juan Fanning 530
Miraflores
Lima - PERU
TEL: (511) 4461388

TRINIDAD
AMR Ltd
Ground Floor
Maritime Plaza
Barataria TRINIDAD W.I.
TEL: (868) 638 6385

URUGUAY
Todo Musica S.A.
Francisco Acuna de Figueroa 1771
C.P.: 11.800
Montevideo, URUGUAY
TEL: (02) 924-2335

VENEZUELA
Instrumentos Musicales Allegro,C.A.
Av.las industrias edf.Guitar import #7 zona Industrial de Turumo
Caracas, VENEZUELA
TEL: (212) 244-1122

EUROPE

BELGIUM/FRANCE/ HOLLAND/ LUXEMBOURG
Roland Central Europe N.V.
Houtstraat 3, B-2260, Oevel (Westerlo) BELGIUM
TEL: (014) 575811

CROATIA
ART-CENTAR
Degenova 3.
HR - 10000 Zagreb, CROATIA
TEL: (1) 466 8493

CZECH REP.
CZECH REPUBLIC DISTRIBUTOR s.r.o
Voctárova 247/16
180 00 Praha 8, CZECH REP.
TEL: (2) 830 20270

DENMARK
Roland Scandinavia A/S
Skagerrakvej 7 Postbox 880
DK-2100 Copenhagen, DENMARK
TEL: 3916 6200

FINLAND
Roland Scandinavia As, Filial Finland
Vanha Nurmijarventie 62
01670 Vantaa, FINLAND
TEL: (0) 9 68 24 020

GERMANY/AUSTRIA
Roland Elektronische Musikinstrumente HmbH.
Oststrasse 96, 22844 Norderstedt, GERMANY
TEL: (040) 52 60090

GREECE/CYPRUS
STOLLAS S.A.
Music Sound Light
155, New National Road
Patras 26442, GREECE
TEL: 2610 435400

HUNGARY
Roland East Europe Ltd.
2045. Törökbálint, FSD Park 3. ép., HUNGARY
TEL: (23) 511011

IRELAND
Roland Ireland
E2 Calmount Park, Calmount Avenue, Dublin 12,
Republic of IRELAND
TEL: (01) 4294444

ITALY
Roland Italy S. p. A.
Viale delle Industrie 8,
20020 Arese, Milano, ITALY
TEL: (02) 937-78300

NORWAY
Roland Scandinavia Avd. Kontor Norge
Lilleakerveien 2 Postboks 95 Lilleaker N-0216 Oslo,
NORWAY
TEL: 2273 0074

POLAND
ROLAND POLSKA SP. Z O.O.
ul. Kty Grodziskie 16B
03-289 Warszawa, POLAND
TEL: (022) 678 9512

PORTUGAL
Roland Systems Group EMEA, S.L.
Branch Office Porto
Edifício Tower Plaza
Rotunda Eng. Edgar Cardoso 23, 9ºG
4400-676 Vila Nova de Gaia,
PORTUGAL
TEL: (+351) 22 608 00 60

ROMANIA
FBS LINES
Piata Libertatii 1,
535500 Gheorgheni, ROMANIA
TEL: (266) 364 609

RUSSIA
Roland Music LLC
Dorozhnaya ul.3,korp.6
117 545 Moscow, RUSSIA
TEL: (495) 981-4967

SERBIA
Music AP Ltd.
Sutjeska br. 5 XS - 24413 Palic, SERBIA
TEL: (024) 539 395

SLOVAKIA
DAN Acoustic s.r.o.
Povazská 18.
SK - 940 01 Nové Zámky, SLOVAKIA
TEL: (035) 6424 330

SPAIN
Roland Systems Group EMEA, S.L.
Paseo García Faria, 33-35
08005 Barcelona, SPAIN
TEL: 93 493 91 00

SWEDEN
Roland Scandinavia A/S
SWEDISH SALES OFFICE
Mårbackagatan 31, 4 tr.
SE-123 43 Farsta, SWEDEN
TEL: (0) 8 683 04 30

SWITZERLAND
Roland (Switzerland) AG
Landstrasse 5, Postfach,
CH-4452 Itingen, SWITZERLAND
TEL: (061) 975-9987

UKRAINE
EURHYTHMICS Ltd.
P.O.Box: 37-a.
Nedecey Str. 30
UA - 89600 Mukachevo, UKRAINE
TEL: (03131) 414-40

UNITED KINGDOM
Roland (U.K.) Ltd.
Atlantic Close, SWANSEA SA7 9FJ, UNITED KINGDOM
TEL: (01792) 702701

MIDDLE EAST

BAHRAIN
Moon Stores
No.1231&1249 Rumaytha Building Road 3931,
Manama 339, BAHRAIN
TEL: 17 813 942

IRAN
MOCO INC.
Jadeh Makhsous Karaj (K-9), Nakhe Zarin Ave.
Jalal Street, Reza Alley No.4
Tehran 1389716791, IRAN
TEL: (021)-44545370-5

ISRAEL
Halilit P. Greenspoon & Sons Ltd.
8 Retzif Ha'alia Hashnia St.
Tel-Aviv-Yafo ISRAEL
TEL: (03) 6823666

JORDAN
MUSIC HOUSE CO. LTD.
FREDDY FOR MUSIC
P. O. Box 922846
Amman 11192, JORDAN
TEL: (06) 5692696

KUWAIT
EASA HUSAIN AL-YOUSIFI & SONS CO.
Al-Yousifi Service Center
P.O.Box 126 (Safat) 13002, KUWAIT
TEL: 00 965 802929

LEBANON
Chahine S.A.L.
George Zeidan St., Chahine Bldg., Achrafieh, P.O.Box: 16-5857
Beirut, LEBANON
TEL: (01) 20-1441

OMAN
TALENTZ CENTRE L.L.C.
Malatan House No.1
Al Noor Street, Ruwi
SULTANATE OF OMAN
TEL: 2478 3443

QATAR
AL-EMADI TRADING & CONTRACTING CO.
P.O. Box 62, Doha, QATAR
TEL: 4423-554

SAUDI ARABIA
aDawliah Universal Electronics APL
Behind Pizza Inn
Prince Turkey Street
aDawliah Building,
PO BOX 2154,
Alkhobar 31952,
SAUDI ARABIA
TEL: (03) 8643601

SYRIA
Technical Light & Sound Center
PO Box 13520 Bldg No.49
Khaled Abn Alwalid St.
Damascus, SYRIA
TEL: (011) 223-5384

TURKEY
ZUHAL DIS TICARET A.S.
Galip Dede Cad. No.33
Beyoglu, Istanbul, TURKEY
TEL: (0212) 249 85 10

U.A.E.
Zak Electronics & Musical Instruments Co. L.L.C.
Zabeel Road, Al Sherooq Bldg., No. 14, Ground Floor, Dubai, U.A.E.
TEL: (04) 3360715

NORTH AMERICA

CANADA
Roland Canada Ltd. (Head Office)
5480 Parkwood Way Richmond B. C., V6V 2M4, CANADA
TEL: (604) 270 6626

Roland Canada Ltd. (Toronto Office)
170 Admiral Boulevard Mississauga On L5T 2N6, CANADA
TEL: (905) 362 9707

U. S. A.
Roland Corporation U.S.
5100 S. Eastern Avenue Los Angeles, CA 90040-2938, U. S. A.
TEL: (323) 890 3700

As of Feb. 1, 2011 (ROLAND)

For C.A. US (Proposition 65)

WARNING

This product contains chemicals known to cause cancer, birth defects and other reproductive harm, including lead.

Roland Keyboard Stand KS-J8 取扱説明書

このスタンドを正しくお使いいただくために、ご使用前に「安全上のご注意」と「使用上のご注意」をよくお読みください。
また、取扱説明書は必要なときにすぐに見ることができるよう、手元に置いてください。

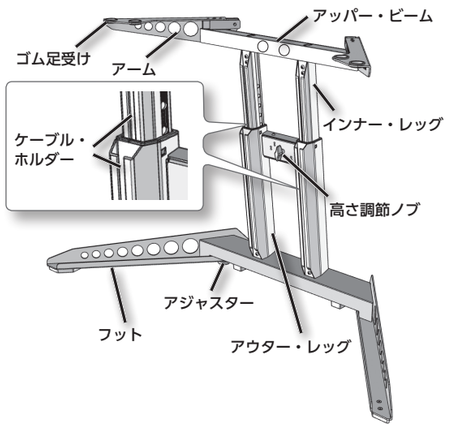

※ 組み立てや折りたたみの際は、指などをはさまないよう、十分にご注意ください。
※ キーボードを載せたまま、スタンドの高さを調節しないでください。
※ スタンドの穴などに指を入れないでください。けがをする恐れがあります。
※ インナー・レッグがロックされていることを確認してから使用してください。インナー・レッグがロックされていないと、キーボードが落下してけがをする恐れがあります。
※ キーボードに接続したケーブル類は、ケーブル・ホルダーに収納してください。
※ キーボードを載せたまま、スタンドを移動させないでください。転倒や落下の恐れがあります。

スタンドを組み立てる

※ 組み立てるときは、部品を入れている梱包シートや、柔らかい布などを下に敷いて作業をしてください。床などに直接部品を置くと部品や床に傷がつく恐れがあります。

1 フットとアームをセットする

1. 下図のようにスタンドを置きます。

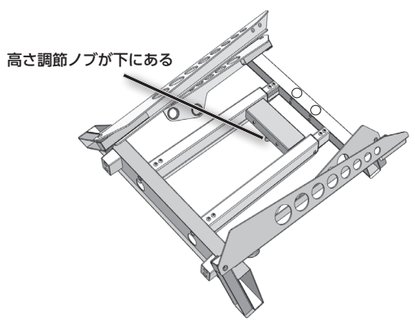

2. フットを片方ずつ開きます。

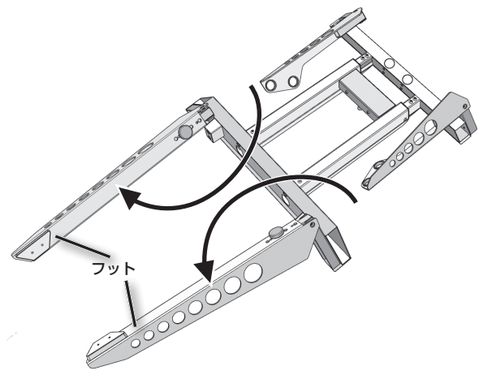

3. スタンドを裏返します。

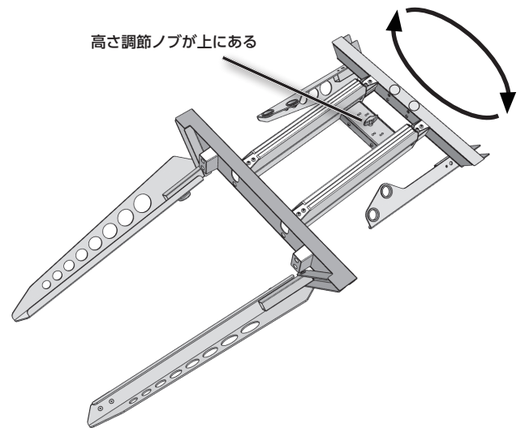

4. フットをいっぱいまで開きます。

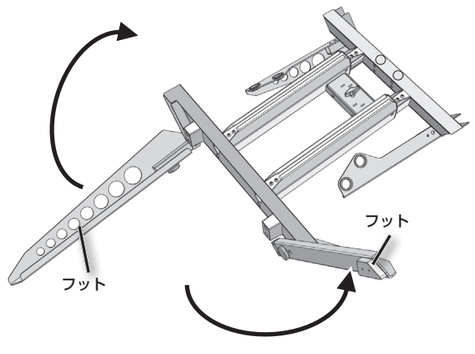

5. スタンドを起こします。

6. アームをいっぱいまで開きます。

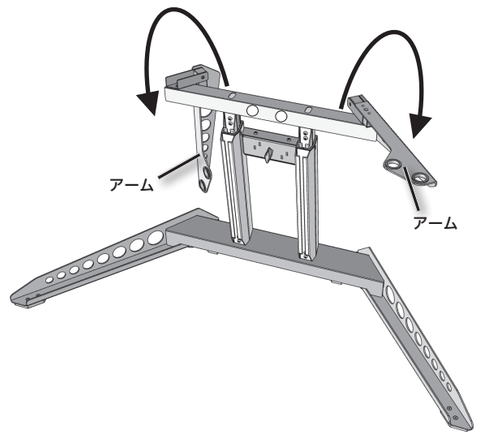

2 スタンドの高さを調節する

1. 片手でアッパー・ビームを支え、高さ調節ノブを右に回します。
インナー・レッグのロックが解除され、アッパー・ビームが動きます。

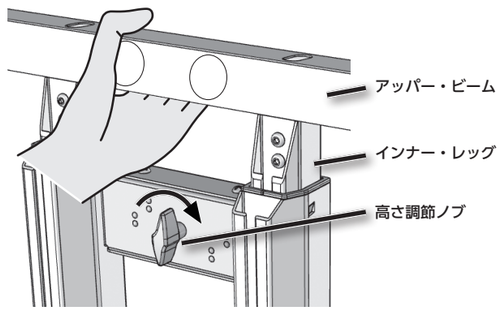

2. 高さ調節ノブを回したままアッパー・ビームを持ち上げ、好みの高さに調節します。
インナー・レッグの穴の中心が、アウター・レッグの端と同じ高さになるように合わせます。

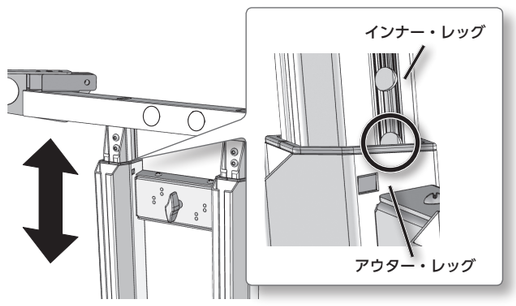

3. 高さ調節ノブから手を放します。
カチッという音が鳴り、インナー・レッグがロックされます。
※ アッパー・ビームを少し上下させて、インナー・レッグがロックされているかを確認してください。

メモ

スタンドががたつく場合は、アジャスターを回して高さを調節します。

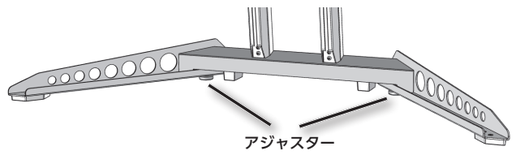

キーボードをセットする

1. キーボード底面にある鍵盤側のゴム足を、アームのゴム足受け（A または B）に確実に入れます。
アームのゴム足受けに鍵盤側のゴム足を入れると、キーボードが正しくセットされます。
※ 2 つのゴム足がゴム足受けに入っていることを確認してください。ゴム足がゴム足受けに入っていないと、キーボードが傾いたり落下したりする恐れがあります。

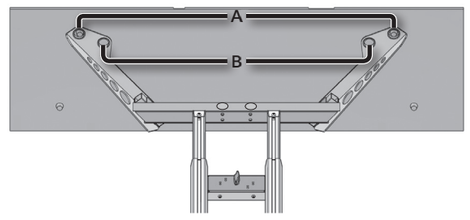

スタンドを折りたたむ

1. キーボードに接続しているケーブルをすべて外します。
2. キーボードをスタンドからおろします。
3. ケーブル・ホルダーからケーブルを取り出します。
4. 「スタンドの高さを調節する」の手順で、スタンドの高さを一番低い位置にします。
※ アッパー・ビームを少し上下させて、インナー・レッグがロックされているかを確認してください。
5. 「フットとアームをセットする」とは逆の手順で、スタンドを折りたたみます。

安全上のご注意

火災・感電・傷害を防止するには

⚠警告と⚠注意の意味について

⚠ 警告	取扱いを誤った場合に、使用者が死亡または重傷を負う可能性が想定される内容を表わしています。
⚠ 注意	取扱いを誤った場合に、使用者が傷害を負う危険が想定される場合および物的損害のみの発生が想定される内容を表わしています。 ※物的損害とは、家屋・家財および家畜・ペットにかかわる拡大損害を表わしています。

図記号の例

⚠	△は、注意（危険、警告を含む）を表わしています。具体的な注意内容は、△の中に描かれています。左図の場合は、「一般的な注意、警告、危険」を表わしています。
⃠	⃠は、禁止（してはいけないこと）を表わしています。具体的な禁止内容は、⃠の中に描かれています。左図の場合は、「分解禁止」を表わしています。
●	●は、強制（必ずすること）を表わしています。具体的な強制内容は、●の中に描かれています。左図の場合は、「電源プラグをコンセントから抜くこと」を表わしています。

以下の指示を必ず守ってください

⚠ 警告

このスタンドを分解したり（取扱説明書に記載されている指示を除く）、改造したりしないでください。

修理／部品の交換などで、取扱説明書に書かれていないことは、絶対にしないでください。必ずお買い上げ店またはローランドお客様相談センターに相談してください。

次のような場所に設置しないでください。
- 温度が極端に高い場所（直射日光の当たる場所、暖房機器の近く、発熱する機器の上など）
- 水気の近く（風呂場、洗面台、濡れた床など）や湿度の高い場所
- 湯気や油煙が当たる場所
- 塩害の恐れがある場所
- 雨に濡れる場所
- ほこりや砂ぼこりの多い場所
- 振動や揺れの多い場所

このスタンドを、ぐらつく台の上や傾いた場所に設置しないでください。必ず安定した水平な場所に設置してください。

お子様のいるご家庭で使用する場合、お子様の取り扱いやいたずらに注意してください。必ず大人のかたが、監視／指導してあげてください。

⚠ 警告

このスタンドを落としたり、このスタンドに強い衝撃を与えないでください。

⚠ 注意

このスタンドはローランド製品専用です。該当製品以外と組み合わせて使うと、不安定な状態となって落下や転倒を引き起こし、けがをするおそれがあります。詳しくは各製品の取扱説明書をご覧ください。

取扱説明書に記載の注意事項が守られていても、取り扱いによってはスタンドからキーボードが落下したりスタンドが転倒したりする可能性があります。使用にあたっては事前に安全を確認したうえでお使いください。

このスタンドの上に乗らないでください。

使用上のご注意

設置について

- 設置条件（設置面の材質、温度など）によってはスタンドのゴム足が、設置した台などの表面を変色または変質させることがあります。

お手入れについて

- 通常のお手入れは、柔らかい布で乾拭きするか、堅く絞った布で汚れを拭き取ってください。汚れが激しいときは、中性洗剤を含んだ布で汚れを拭き取ってから、柔らかい布で乾拭きしてください。
- 変色や変形の原因となるベンジン、シンナーおよびアルコール類は、使用しないでください。

修理について

- お客様がこのスタンドを分解（取扱説明書に記載されている指示を除く）、改造された場合、以後の性能について保証できなくなります。また、修理をお断りする場合もあります。
- 当社では、この製品の補修用性能部品（製品の機能を維持するために必要な部品）を、製造打切後 6 年間保有しています。この部品保有期間を修理可能の期間とさせていただきます。なお、保有期間が経過した後も、故障箇所によっては修理可能の場合がありますので、お買い上げ店、またはローランドお客様相談センターにご相談ください。

その他の注意について

- このスタンドが入っていた梱包箱や緩衝材を廃棄する場合、各地域のゴミの分別基準に従って行ってください。
- 製品の仕様および外観は、改良のため予告なく変更することがあります。

お問い合わせの窓口

● 製品に関するお問い合わせ先

ローランドお客様相談センター **050-3101-2555**

電話受付時間： 月曜日～土曜日 10:00～17:30（年末年始を除く）

※IP電話からおかけになって繋がらない場合には、お手数ですが、電話番号の前に "0000"（ゼロ4回）をつけてNTTの一般回線からおかけいただくか、携帯電話をご利用ください。

※上記窓口の名称、電話番号等は、予告なく変更することがありますのでご了承ください。

● 最新サポート情報

製品情報、イベント／キャンペーン情報、サポートに関する情報など

ローランド・ホームページ **http://www.roland.co.jp/**

'07. 10. 01 現在（Roland）

©2011 ローランド株式会社 本書の一部、もしくは全部を無断で複写・転載することを禁じます。

Roland は、日本国およびその他の国におけるローランド株式会社の商標または登録商標です。